



ProTalk Cv3

Battery Installation Instructions

Remove the 4 screws on both sides of the Cv3:

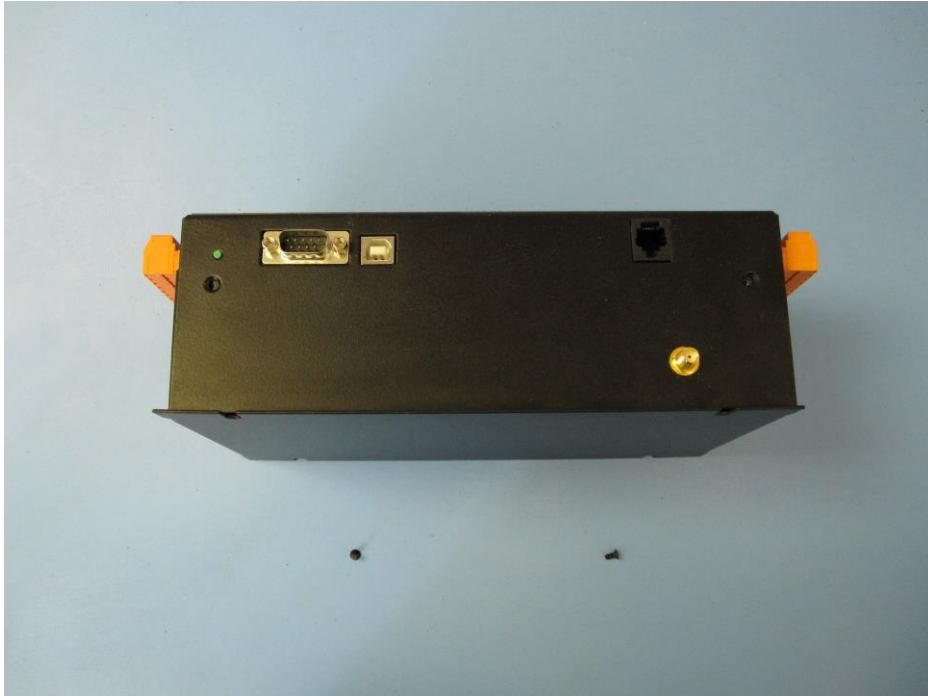

Attach the provided power cable to the battery:

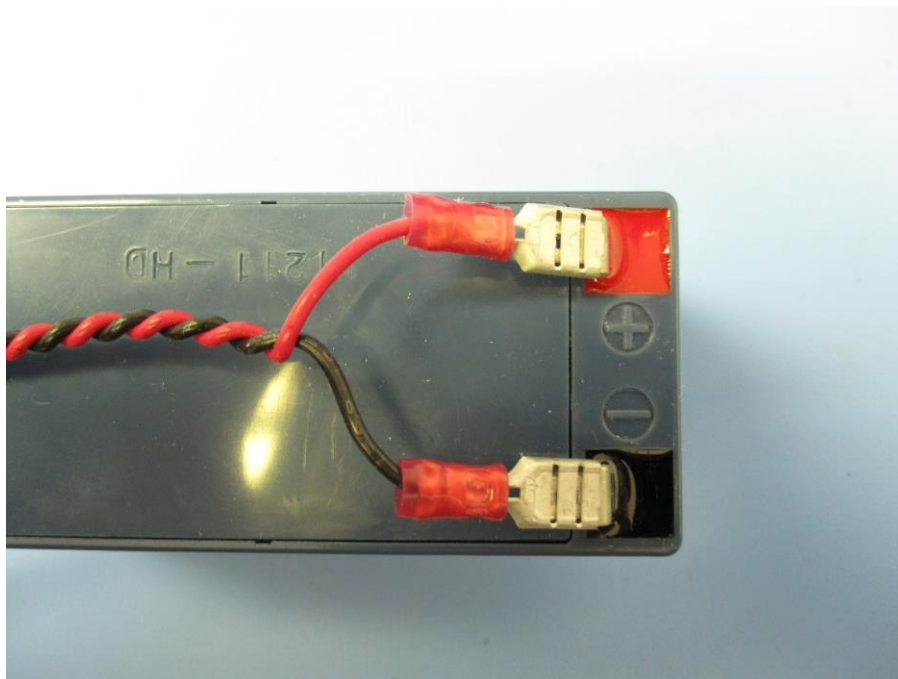


ProTalk Cv3


Battery Installation Instructions

The red wire must match the red terminal (+) and the black wire the black terminal (-). *Failure to connect the battery properly could damage the Cv3.*

Position the battery against the side of the base:

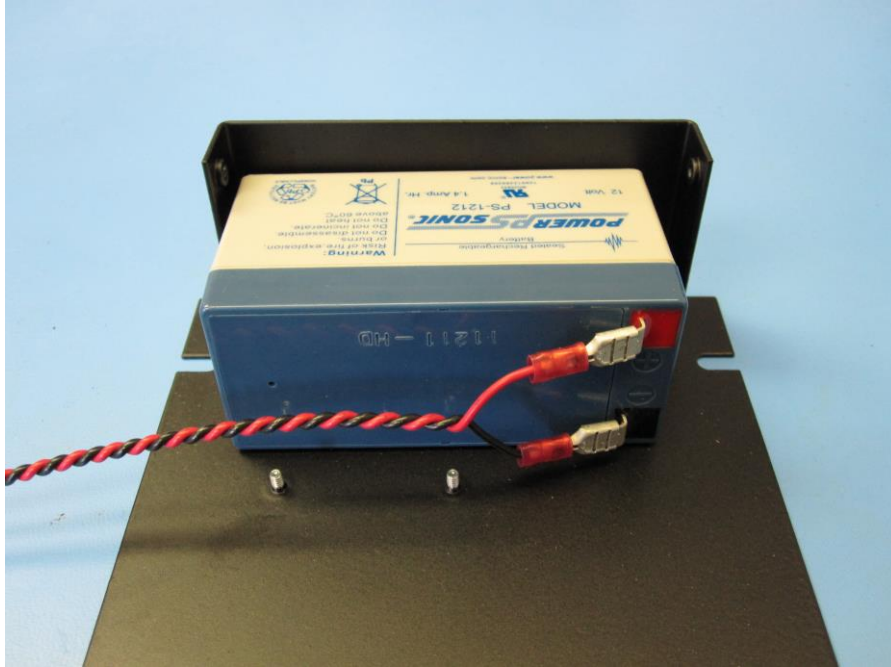

Place the bracket on top of the battery:

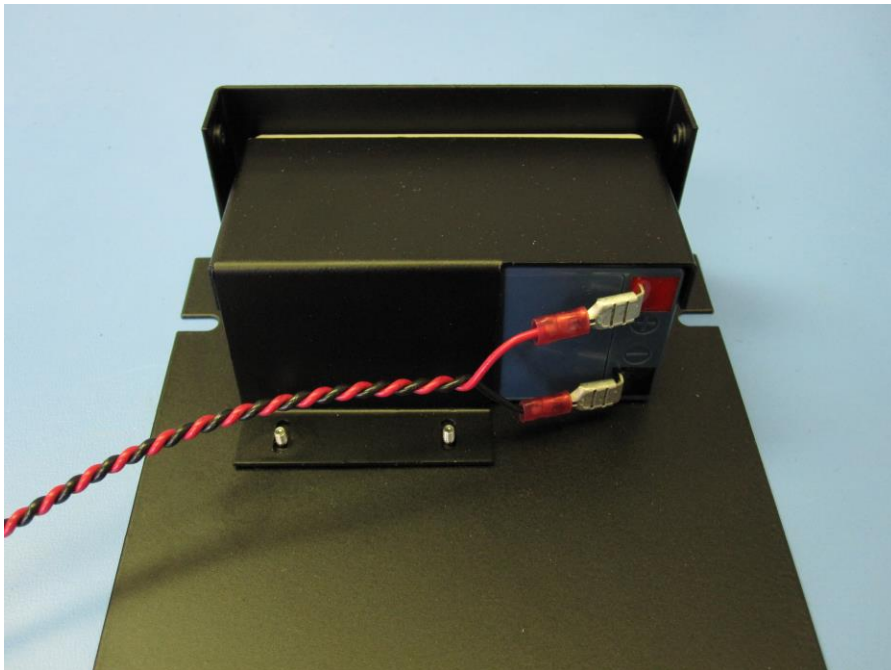

Press the bracket towards the corner of the base and then fasten it using the lock nuts:




Barnett Engineering Ltd.
#200, 550 - 71st Avenue SE
Calgary, Alberta
T2H 0S6


PHONE: (403) 255-9544
TOLL: (800) 268-2646
www.barnettprotalk.com

ProTalk Cv3

Battery Installation Instructions

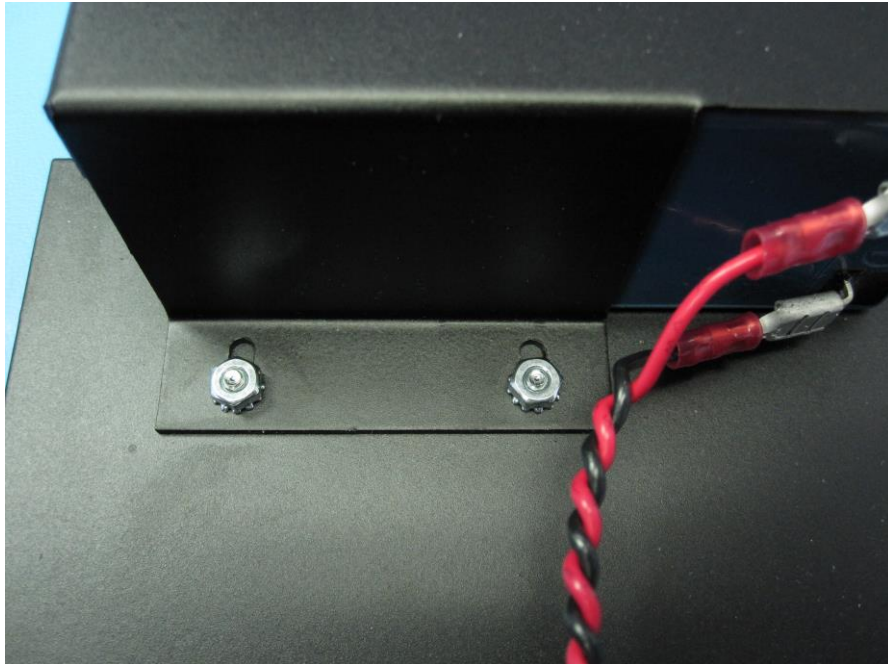


Connect the other end of the cable to the Cv3:

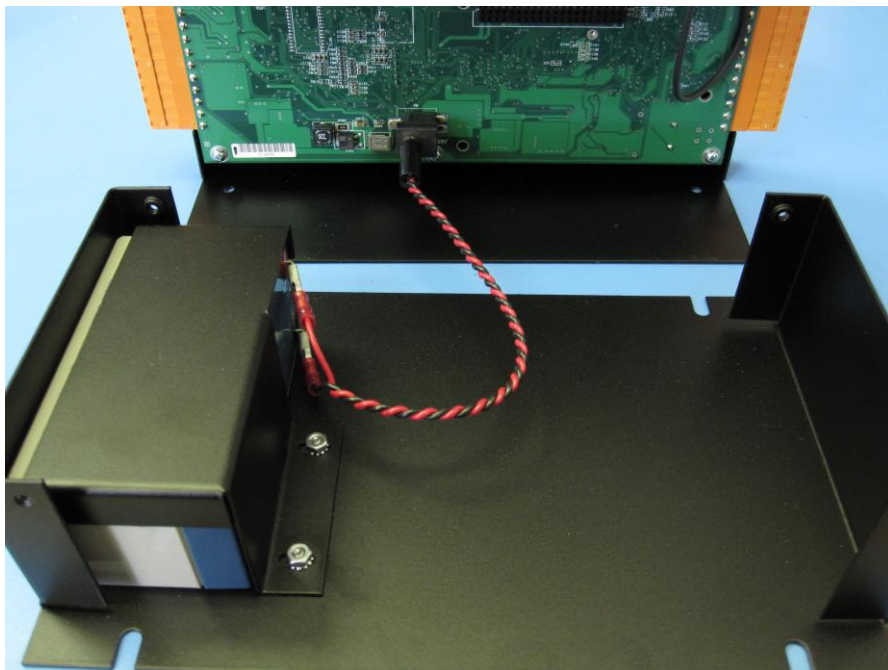

ProTalk CV3

Battery Installation Instructions

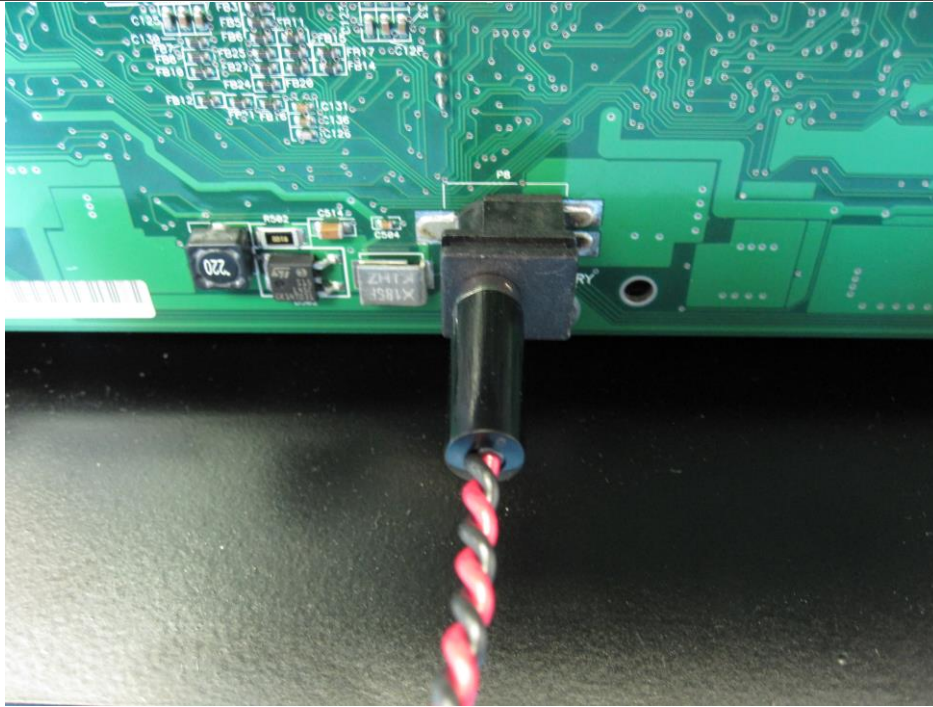

Reassemble the unit.

The firmware now needs to be updated before the battery can be used.




Barnett Engineering Ltd.
#200, 550 - 71st Avenue SE
Calgary, Alberta
T2H 0S6


PHONE: (403) 255-9544
TOLL: (800) 268-2646
www.barnettprotalk.com

Battery Installation Instructions

Open the Cv3 Database Editor and select File -> Update Module Firmware. Follow the instructions until the following window appears:

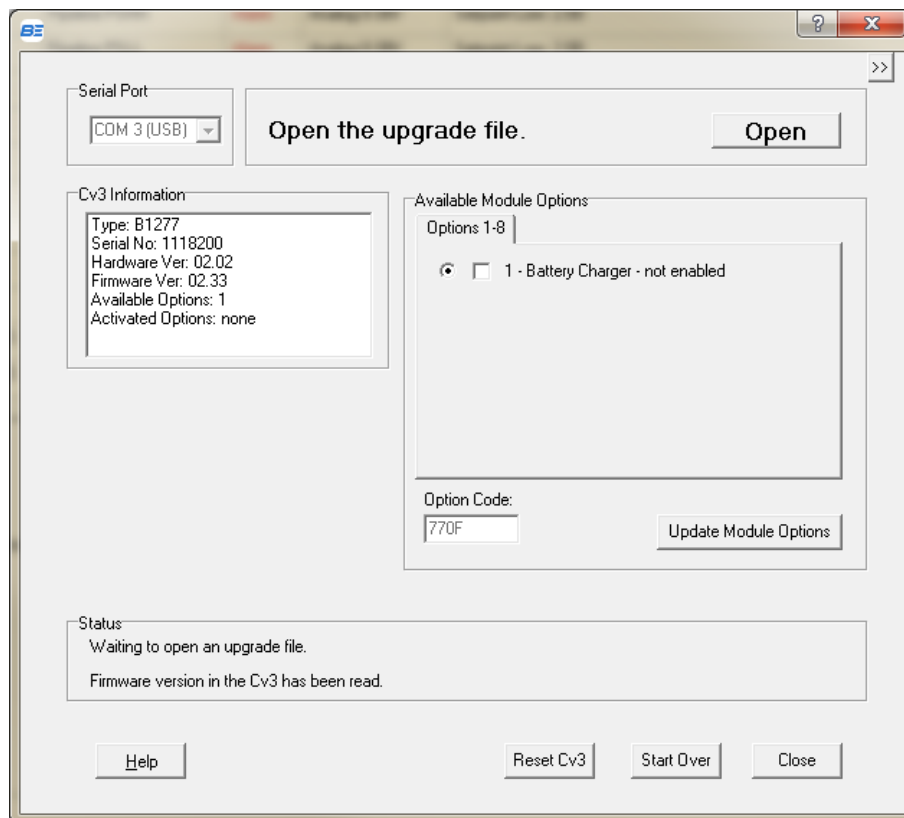

Check the Battery Charger - enabled box and press the Update Module Options button:

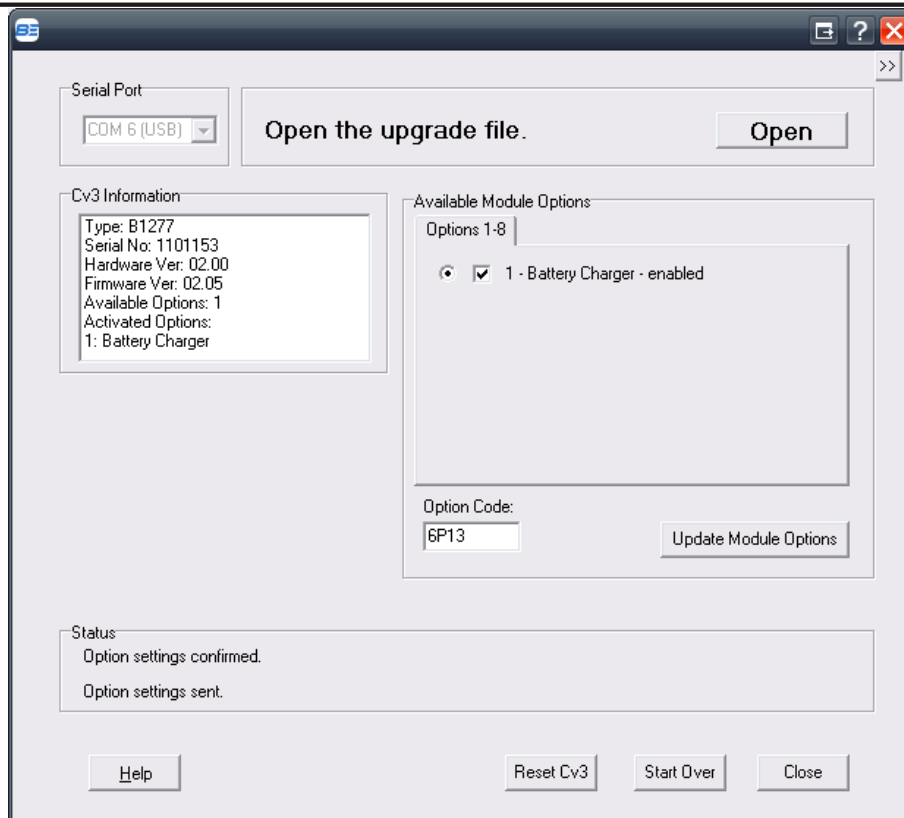

Verify that the option settings are confirmed (under the Status heading) and press the Close button.

The Cv3 battery backup option is now available.