


ProTalk Cv3

SIM Card Replacement Tutorial Hardware Version 2.xx


First, remove the 4 screws on both sides of the Cv3:




Then remove the base and place the top upside-down:

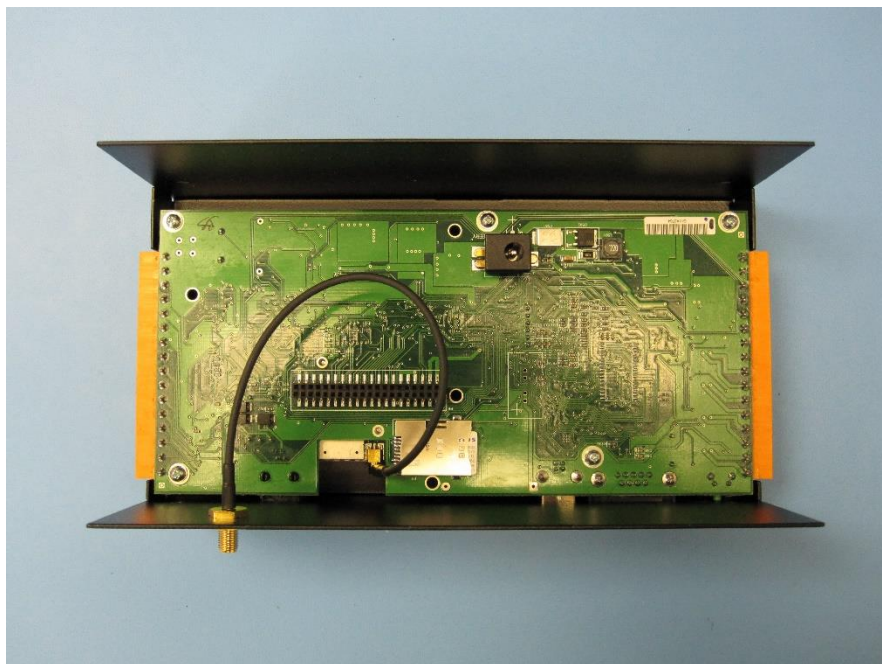

The SIM card in its holder:

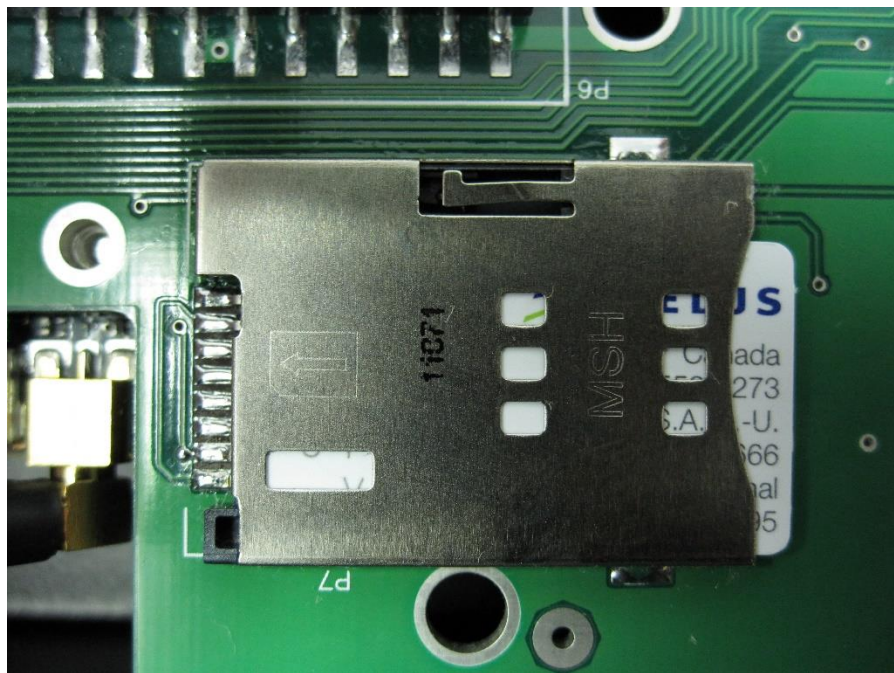

Press the SIM card in from right to left, and once you hear a 'click,' release the card and it will pop out:

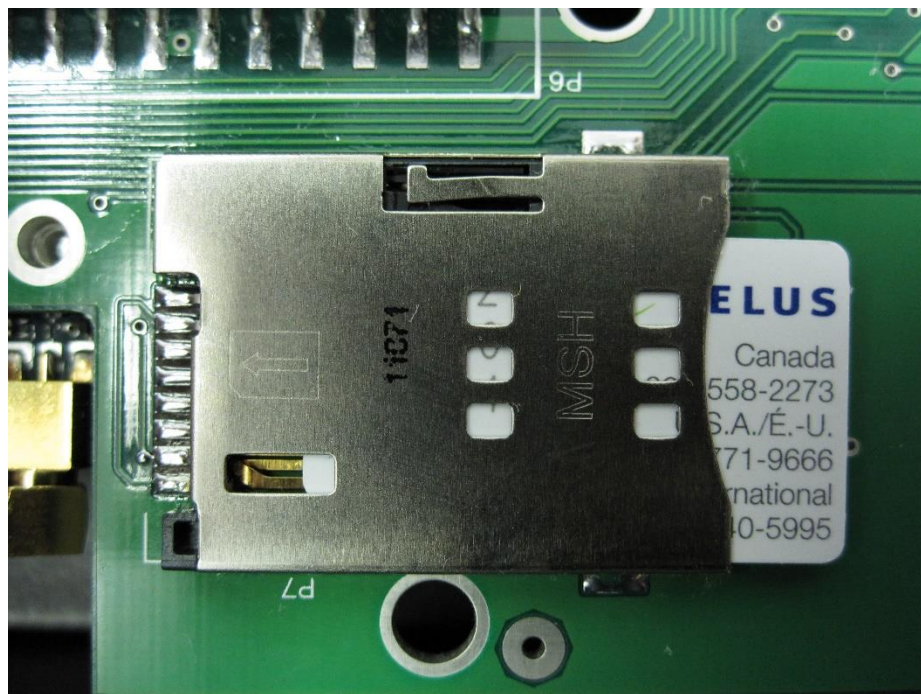

Remove the card and replace it with another; making sure that network label is facing up and the notch is at the lower left-hand-side. Press the card in until a 'click' is heard to complete the installation:

